

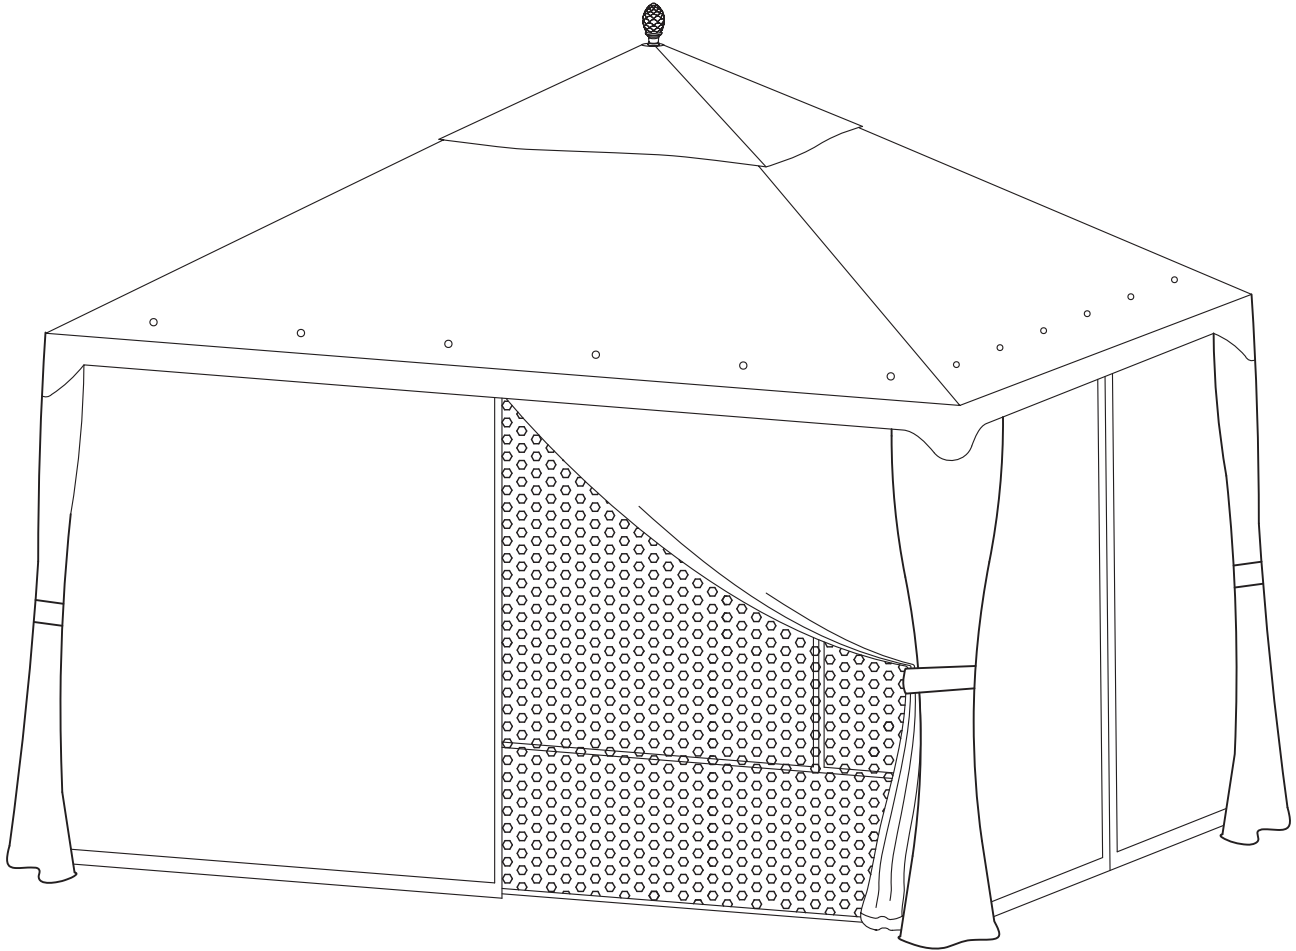


**APPROVED**  
FOR TRANSLATION

ITEM #0057294

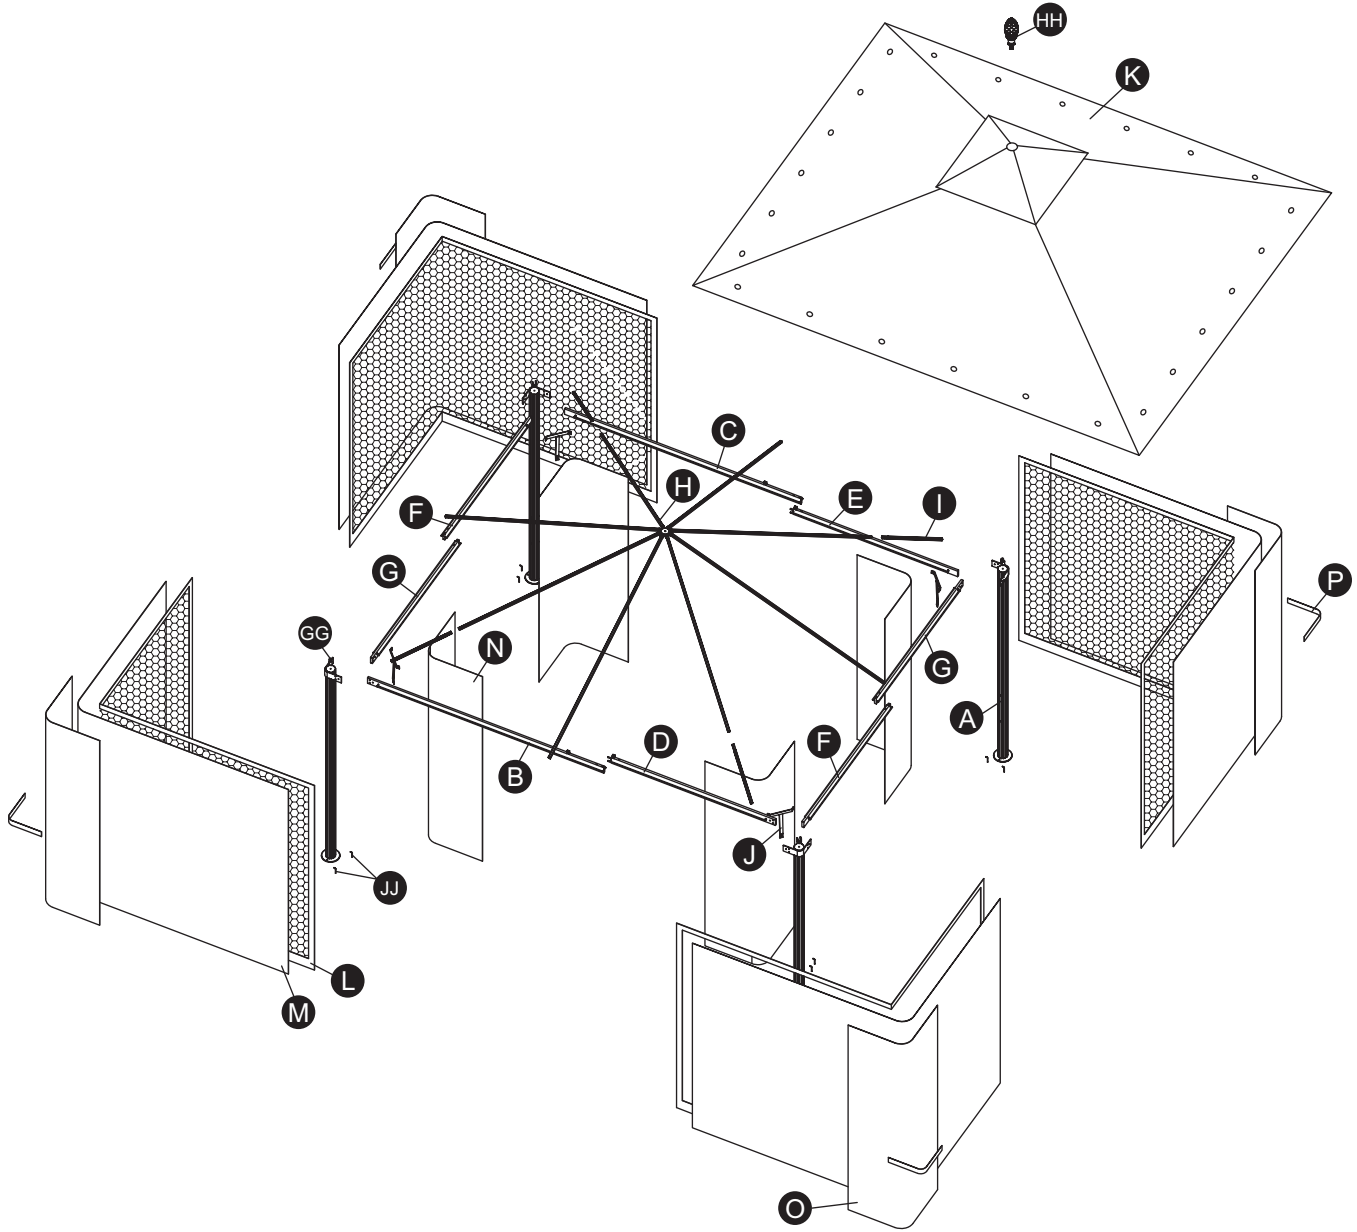
10 FT. X 12 FT. STEEL GAZEBO

MODEL #S-1210GZN



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. – 8 p.m., EST, Monday – Friday.



 


 
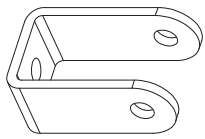
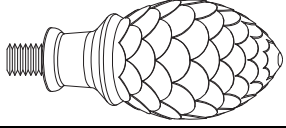
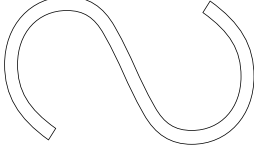
 
 
 

 
# PACKAGE CONTENTS



Part	Description	Quantity
A	Leg post	4
B	Long top crossbar B	1
C	Long top crossbar C	1
D	Long top crossbar D	1
E	Long top crossbar E	1
F	Short top crossbar F	2
G	Short top crossbar G	2
H	Canopy frame	1

Part	Description	Quantity
I	Short frame bar	4
J	T-shaped bracket	4
K	Large canopy	1
L	Insect panel net	4
M	Apron panel	4
N	Inner decorative apron	4
O	Outer decorative apron	4
P	Sash	4

# HARDWARE CONTENTS

Part	Description	Quantity	Picture (Shown to size)
AA	M6 x 15 L bolt	20 + 2 spares	
BB	M6 x 20 L bolt	40 + 2 spares	
CC	M8 x 30 L bolt	4	
DD	M6 x 30 L bolt	8 + 1 spare	
EE	M6 metal washer	68 + 3 spares	
FF	M6 nut	8 + 1 spare	
GG	U-bracket*	4	
HH	Finial top*	1	
II	"S" hook*	9	
JJ	Lawn stake*	8	
KK	M8 bolt cap	4	
LL	M8 nut cap	4	
MM	M8 metal washer	8 + 1 spare	
NN	M8 nut	4	
<b>Also Included:</b>			
Hex wrenches		4	n/a
Touch up paint		1	n/a

\*Not to scale.

# SAFETY INFORMATION

## WARNING

- The gazebo is heavy. Handle with care. The gazebo requires four people for safe assembly.

## CAUTION

- Assemble the gazebo on a soft, non-abrasive surface (such as grass) to avoid damage.
- The gazebo is not intended to be a permanent structure. Disassemble in the event of inclement weather (strong wind, heavy rain, etc.) to avoid damage.
- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM CANOPY FABRIC.** The canopy is made with flame-resistant fabric which meets CPAI-84 specifications. It is not fireproof. The canopy fabric will burn if left in continuous contact with flame/heat sources.

## PREPARATION

Before beginning assembly of the product, make sure all parts are present. Compare parts with package contents list and diagrams on pages 2 and 3. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

**Estimated Assembly Time:** 2.5 hours (does not include unpacking time)

**Tools Required for Assembly:** Wrenches (provided)

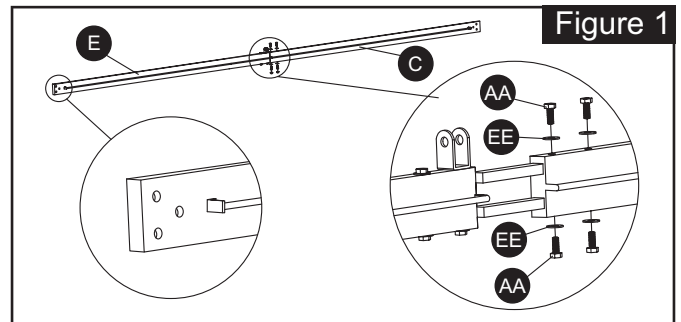
**Helpful Tools:** Drill with 4 mm hex bit, and 10 mm socket wrench

## ASSEMBLY INSTRUCTIONS



**Note:** One end of each crossbar has 3 holes. Be sure the holes on each crossbar are facing the same direction prior to assembly.

- 1) Insert the **long top crossbar (E)** into the **long top crossbar (C)**. Line up the holes and insert four **M6 x 15 L bolts (AA)** through four **metal washers (EE)** and into the **long top crossbar (C)**. Tighten with a provided wrench. **Do not overtighten!** See Figure 1.

Repeat the procedure for the other **long top crossbars (B & D)** and the four **short top crossbars (F & G)**.



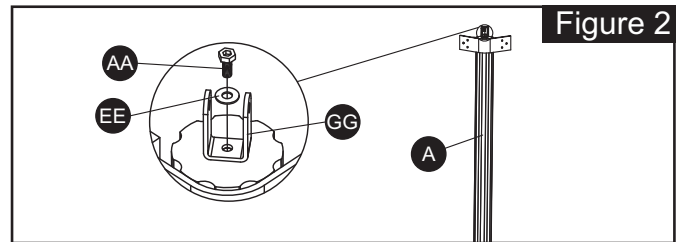
### Hardware Used

Part	Description	Quantity	Picture
AA	M6 x 15 L bolt	16	
EE	M6 metal washer	16	




## ASSEMBLY INSTRUCTIONS

- 2) Place a **U-bracket** (GG) on top of a **leg post** (A) and insert an **M6 x 15 L bolt** (AA) through a **metal washer** (EE) and into the hole. Tighten with a provided wrench. **Do not tighten completely!** See Figure 2.

Repeat the procedure for the three remaining **leg posts** (A).



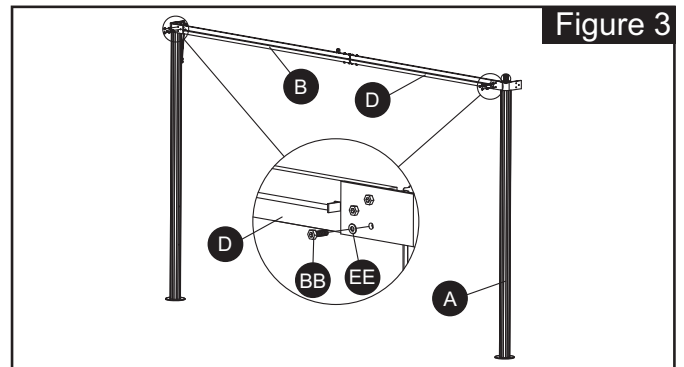
### Hardware Used

Part	Description	Quantity	Picture
AA	M6 x 15 L bolt	4	
EE	M6 metal washer	4	
GG	U-bracket	4	



- 3) Attach the assembled **long top crossbars** (B & D) to two **leg posts** (A). Line up the holes and insert three **M6 x 20 L bolts** (BB) through three **metal washers** (EE) and into each hole. Tighten with a provided wrench. **Do not overtighten!** See Figure 3.

Repeat the procedure for the other **assembled long top crossbars** (C & E).

**Note:** the **long top crossbars** (B & D and C & E) must be attached to the inside of the **leg posts** (A).



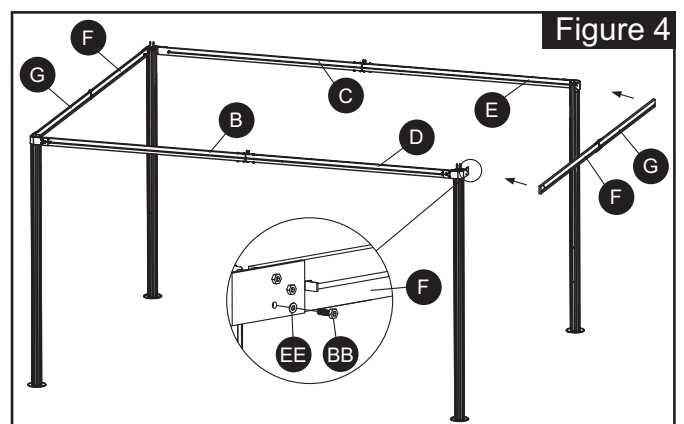
### Hardware Used

Part	Description	Quantity	Picture
BB	M6 x 20 L bolt	12	
EE	M6 metal washer	12	



- 4) With all of the **leg posts** (A) assembled in Step 3 standing upright and parallel, attach one of the assembled **short top crossbars** (F & G). Line up the holes and insert three **M6 x 20 L bolts** (BB) through three **metal washers** (EE) and into each hole. Tighten with a provided wrench. **Do not overtighten!** See Figure 4.

Repeat the procedure for the other **assembled short top crossbar** (F & G).

**Note:** the **short top crossbars** (F & G) must be attached to the inside of the **leg posts** (A).



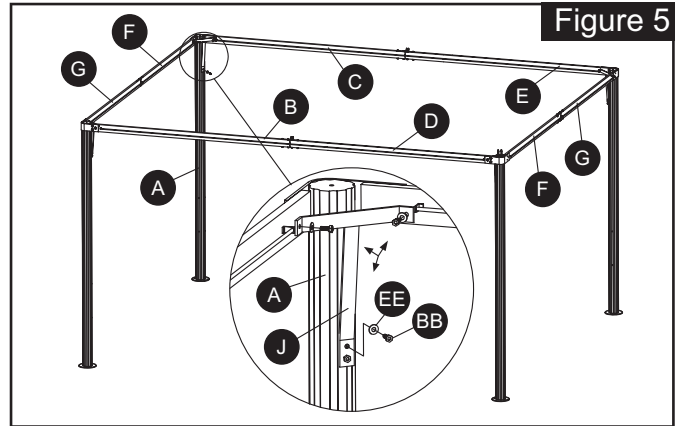
### Hardware Used

Part	Description	Quantity	Picture
BB	M6 x 20 L bolt	12	
EE	M6 metal washer	12	



# ASSEMBLY INSTRUCTIONS

- 5) Line up all of the holes on the **T-shaped bracket** (J), with the **leg post** (A) and the assembled **top crossbars** (F & G and C & E). Insert four **M6 x 20 L bolts** (BB) through four **metal washers** (EE) and into each of the four holes. Tighten with a provided wrench. **Do not overtighten!** See Figure 5.

Repeat the procedure for the other three corners.



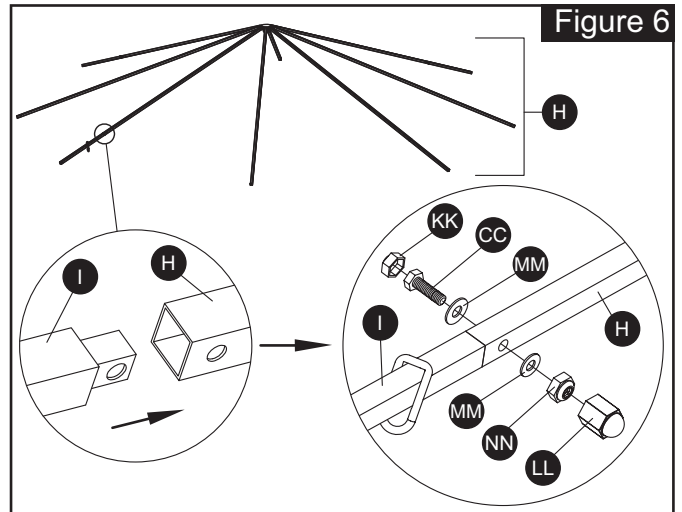
## Hardware Used

Part	Description	Quantity	Picture
BB	M6 x 20 L bolt	16	
EE	M6 metal washer	16	






- 6) Insert a **short frame bar** (I) into a long arm of the **canopy frame** (H) by inserting an **M6 x 25 L bolt** (CC) through a **metal washer** (MM), into the **canopy frame** (H) arm, and through another **metal washer** (MM). Fasten with an **M6 nut** (NN) using the provided wrenches to tighten. **Do not overtighten!** See Figure 6.

Place an **M6 bolt cap** (KK) over each **M6 x 25 L bolt** (CC) and place an **M6 nut cap** (LL) over each **M6 nut** (GG).

Repeat the procedure for the remaining three **short frame bars** (I).

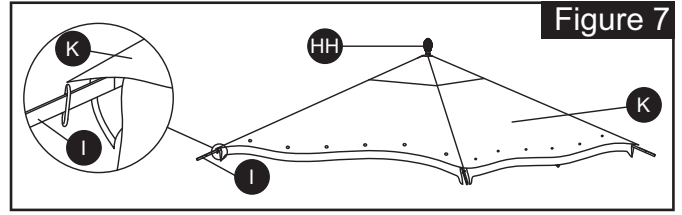


## Hardware Used

Part	Description	Quantity	Picture
CC	M8 x 30 L bolt	4	
KK	M8 bolt cap	4	
LL	M8 nut cap	4	
MM	M8 metal washer	8	
NN	M8 nut	4	

# ASSEMBLY INSTRUCTIONS

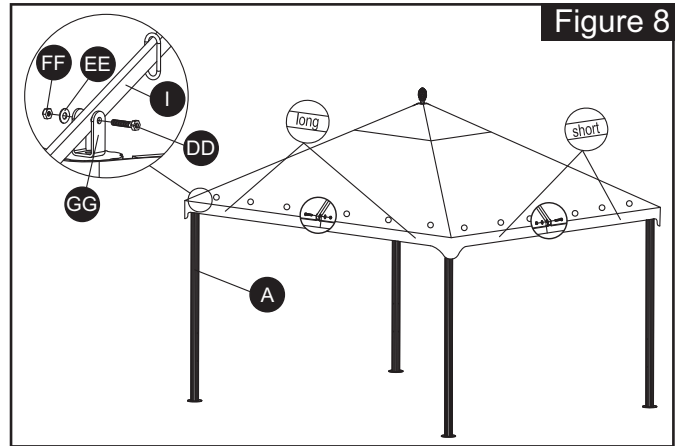
- 7) Place the **large canopy** (K) on top of the **assembled top frame** (I & H) and insert the **short top frame bars** (I) through the holes on the bottom of the **large canopy** (K). Fasten the **finial top** (HH) into the hole at the center of the **assembled top frame** (I & H). See Figure 7.



## Hardware Used

Part	Description	Quantity	Picture
HH	Finial top	1	

- 8) Place the assembled canopy and frame (H, I, & K) onto the top of the assembled **leg posts** (A).  
**Note:** Place the long side of the assembled canopy frame (H, I, & K) onto the long side of the assembled **leg posts** (A).



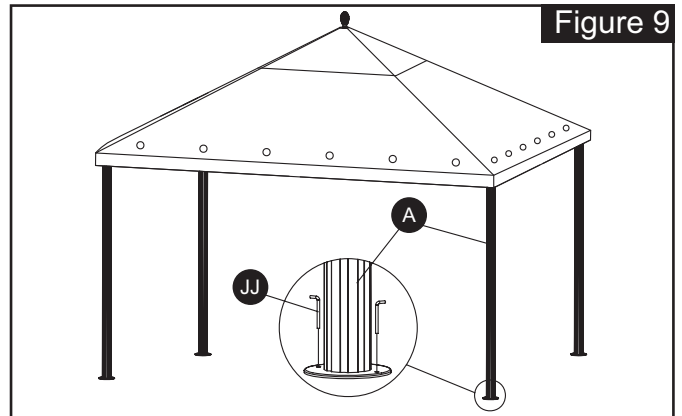
Place a **short frame bar** (I) into a corner **U-bracket** (GG). Line up the holes and insert an **M6 x 30 L bolt** (DD) through the **U-bracket** (GG), the **short frame bar** (I) and the **metal washer** (EE). Fasten with an **M6 nut** (FF) using the provided wrenches to tighten. **Do not overtighten!** See Figure 8.

## Hardware Used

Part	Description	Quantity	Picture
DD	M6 x 30 L bolt	8	
EE	M6 metal washer	8	
FF	M6 nut	8	

Repeat the procedure for the other three corners and the four existing brackets in the center of each of the assembled top crossbars (short and long).

- 9) Secure the gazebo to the ground by inserting the **lawn stakes** (JJ) through the holes at the bottom of each **leg post** (A) and into the ground. See Figure 9.

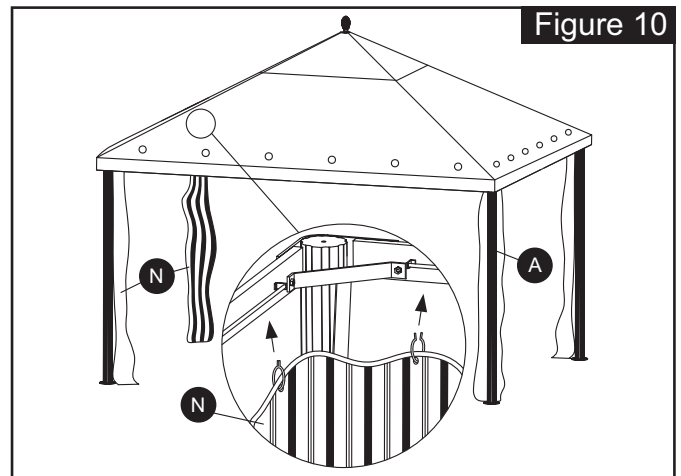


## Hardware Used

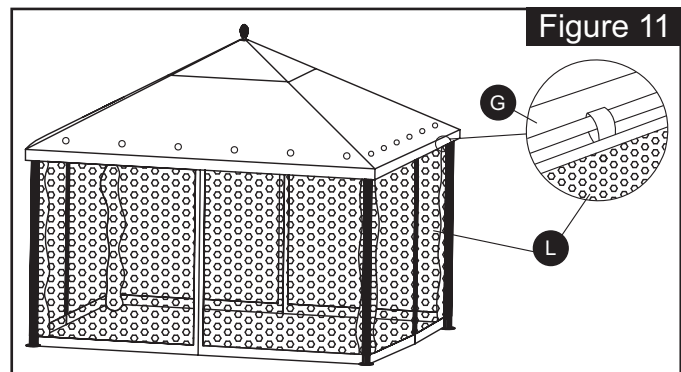
Part	Description	Quantity	Picture
JJ	Lawn stake	8	

## ASSEMBLY INSTRUCTIONS

- 10) From inside the gazebo, hang the **inner decorative aprons** (N) on the rod on each inside corner. Pull apart and open the plastic ring, place around the rod, and press together to secure. See Figure 10.



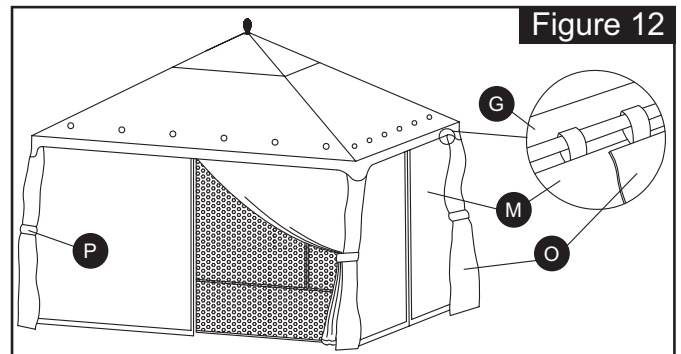
- 11) From inside the gazebo, attach the **insect panel net** (L) to the rod on the inside of the crossbars with using the Velcro® tabs. See Figure 11.



- 12) From inside the gazebo, attach the **outer decorative aprons** (O) to the rods on the outside of the **crossbars** (G shown) using the Velcro® tabs. See Figure 12.

Attach the **apron panels** (M) to the rod on the outside of the **crossbars** (G shown) with Velcro® tabs. See Figure 12.

**Note:** You can tie the inner **decorative aprons** (N) and **outer decorative aprons** (O) together using the **sash** (P).



## CARE AND MAINTENANCE

---

Wash with mild soap, rinse with water and let air dry.

## WARRANTY

---

This warranty is extended to the original purchaser and applies to defects in materials and workmanship of your patio furniture provided your furniture is maintained with care and used only for personal, residential purposes.

**Frames** are warranted to be free from defects in material or workmanship for a period of one (1) year.

**Cushions, Straps and/or Wicker Weaves** are covered for a period of one (1) year against defects in material or workmanship. Sling fabric is covered for a period of one (1) year against defects in material or workmanship.

**Exclusions:** Items used for commercial, contract or other non-residential purposes; display models; items purchased "as is;" or items damaged due to acts of nature, vandalism, misuse or improper assembly are not covered. Discoloration or fading of the finish or fabrics as a result of exposure to the elements, chemicals or spills is not covered. Tabletop breakage, corrosion or rusting of hardware and damages to frames or welds caused by improper assembly, misuse or natural causes are not covered.

If within the stated warranty period a product is found to be defective in material or workmanship, the purchaser must contact the manufacturer's customer service department at 1-800-643-0067. The manufacturer, at its option, will repair or replace the defective parts.

Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

Printed in China